

— CURRENT FROM BATTERY
- - - - - CURRENT FROM IG1
— OTHER

SECTION
SYSTEM CIRCUIT

0117-1

CHARGING SYSTEM

0119-1

STARTING SYSTEM

0920-1,2,3

AUDIO SYSTEM



TO START STOP UNIT

MAIN 200A

ENG+B2 7.5A

SECTION
SYSTEM CIRCUIT

00D-1

DATA LINK CONNECTOR

0140-1

CONTROL SYSTEM

0411-1

ELECTRIC VACUUM PUMP SYSTEM

0112-1

COOLING SYSTEM

0513-1

AUTOMATIC TRANSMISSION
CONTROL SYSTEM

BATTERY

IG1 RELAY

ENG+B2 7.5A

ENGINE1 10A

ENGINE2 15A

ENGINE3 20A

C/U IG1 15A

ENG.MAIN 40A

MAIN RELAY

INJECTOR 30A

EVVT 20A

ROOM 25A

ENG+B 7.5A

ENG IG1 7.5A

EVPS 30A

INTERIOR 15A

FAN1 30A

TO START STOP UNIT

ACC RELAY

AT 15A

AT IND 7.5A

MIRROR 7.5A

TAIL 20A

CABIN+B 50A

AUDIO1 25A

Bose® TYPE AUDIO

AUDIO2 15A

RADIO 7.5A

STR/ALT 200A

(SECTION 00E-1c)

(SECTION 00E-1b)

(SECTION 00E-1c)