

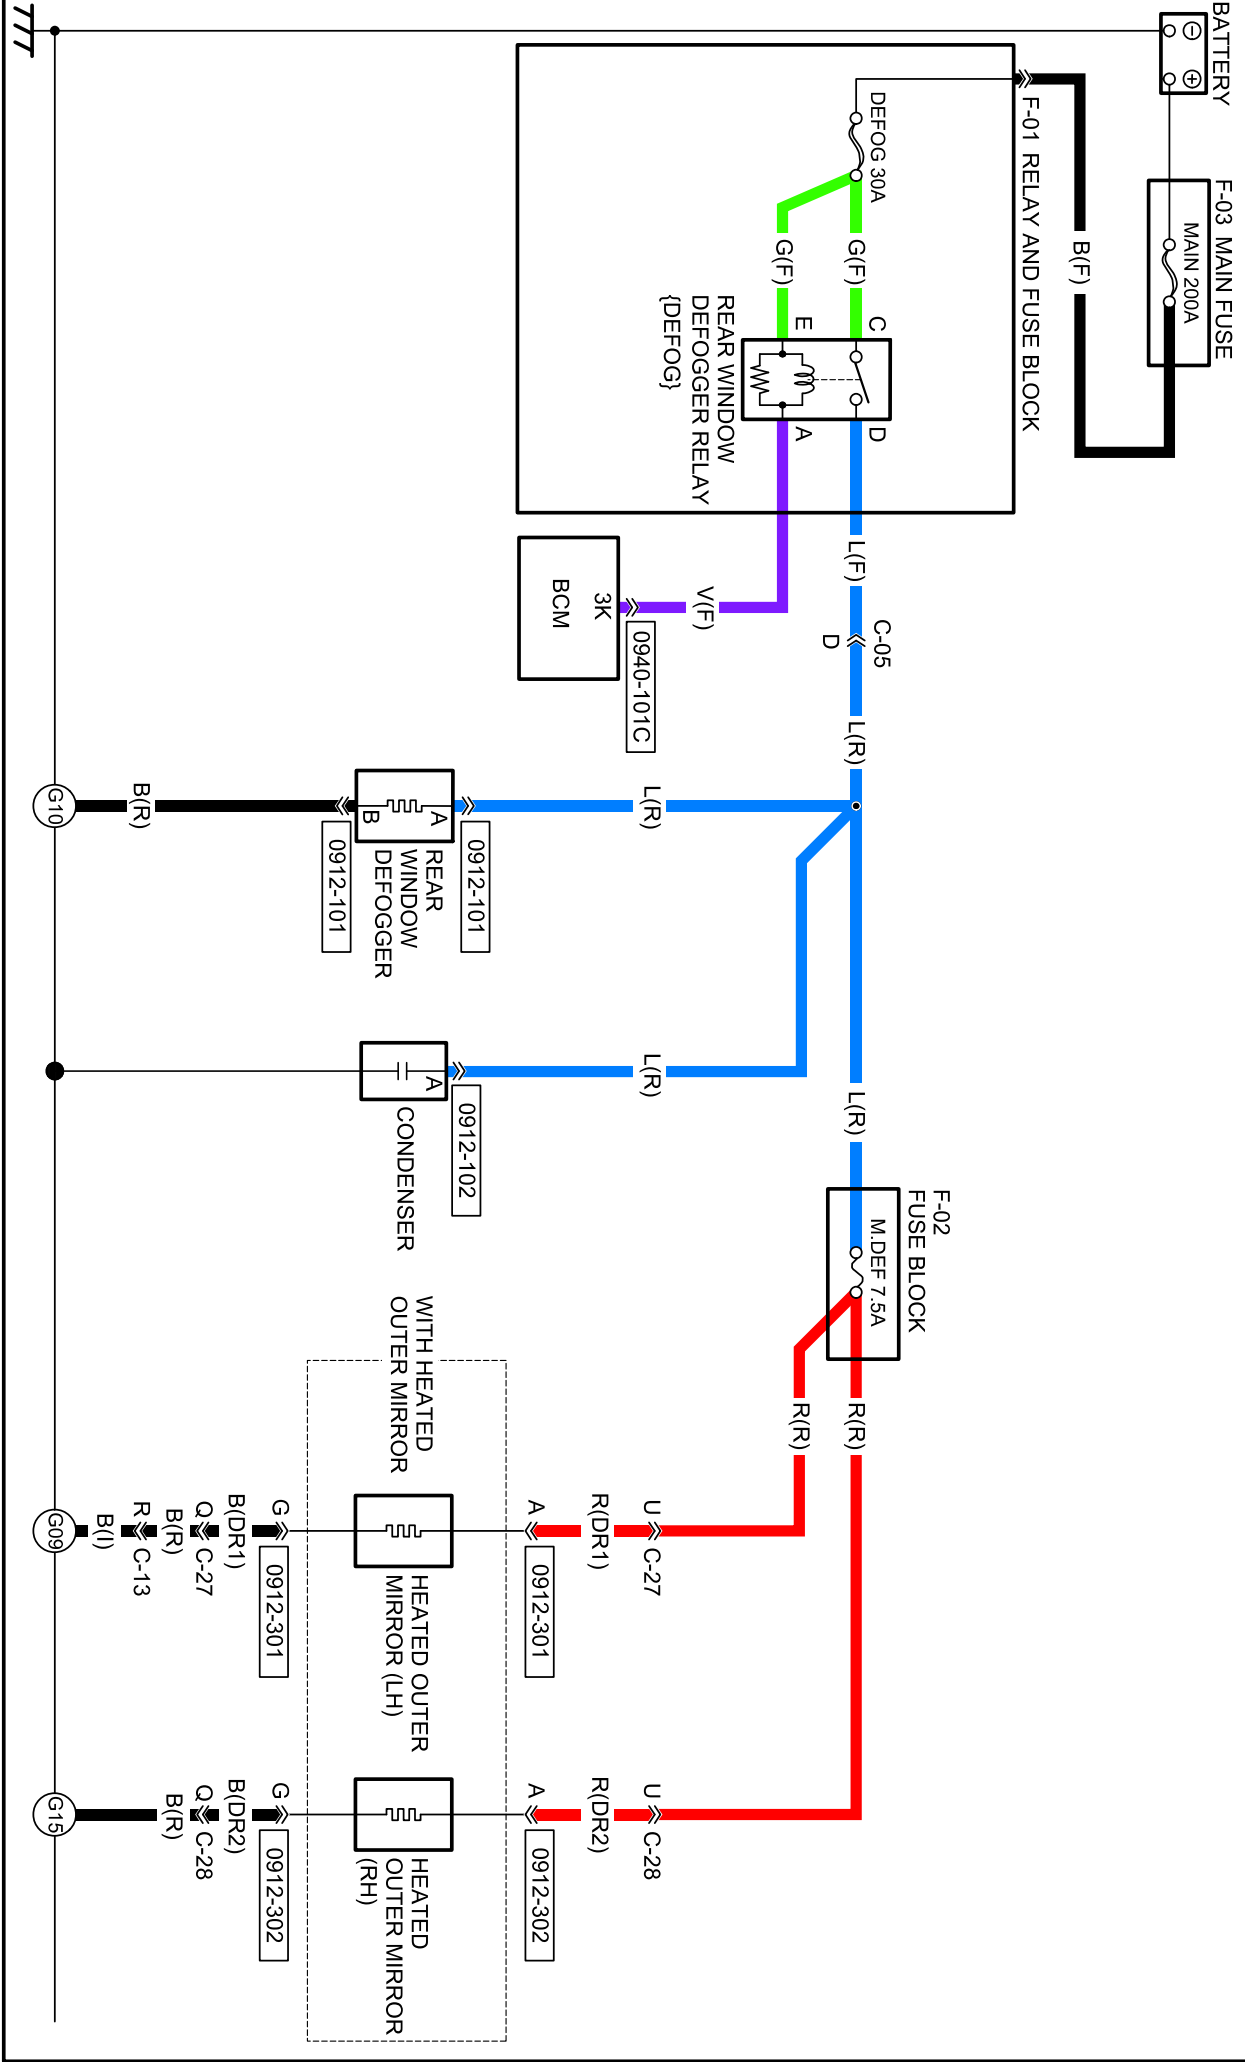
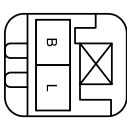
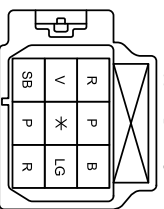
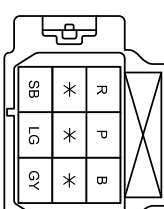


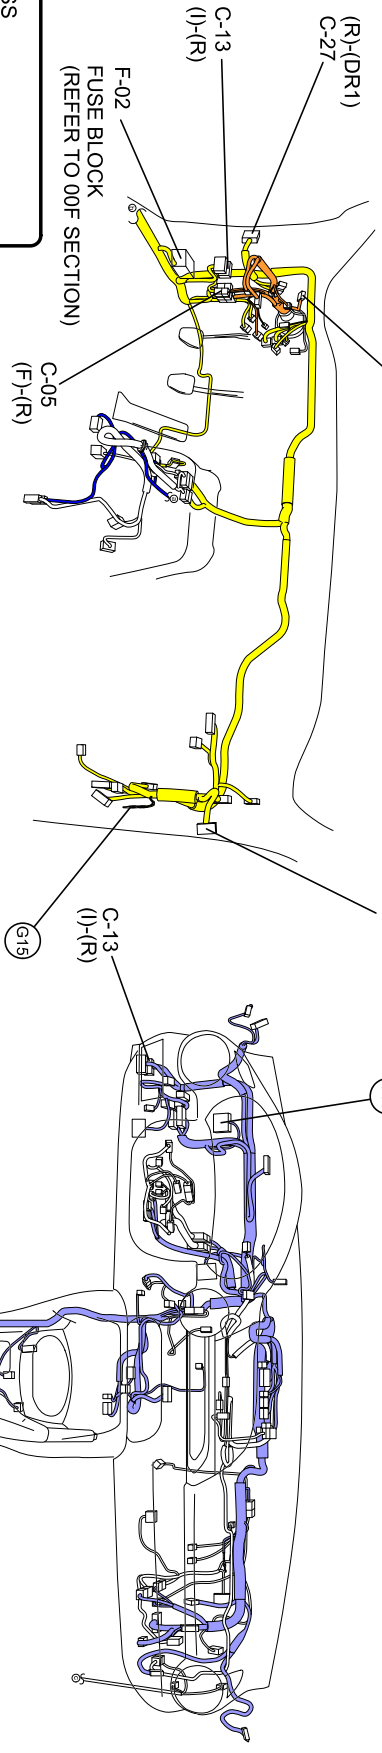

0912-101 REAR WINDOW DEFOGGER	0912-102 CONDENSER	0912-301 HEATED OUTER MIRROR (LH) / POWER OUTER MIRROR (LH) / AUTO DIMMING OUTER MIRROR (LH) / BLIND SPOT MONITORING (BSM) WARNING LIGHT (LH)	0912-302 HEATED OUTER MIRROR (RH) / POWER OUTER MIRROR (RH) / BLIND SPOT MONITORING (BSM) WARNING LIGHT (RH)
 Diagram showing a rectangular defogger grid with a central rectangular area labeled 'B' and 'L'. Labels: B, A, R, R	 Diagram showing a rectangular condenser unit with a central rectangular area labeled 'L'. Labels: A, C	 Diagram showing a rectangular mirror unit with a central rectangular area labeled 'R', 'P', 'B', 'V', 'LG', 'SB', 'P', 'R'. Labels: A, D, G, B, E, H, C, F, I, Q, Q, Q, Q, Q, Q	 Diagram showing a rectangular mirror unit with a central rectangular area labeled 'R', 'P', 'B', 'V', 'LG', 'SB', 'P', 'R'. Labels: A, D, G, B, E, H, C, F, I, Q, Q, Q, Q, Q, Q

Terminal	Measurement condition	Voltage (V)
3K	Ignition is switched ON (engine off or on)	
	Rear window defogger switch is on	1.0 or less
	Rear window defogger switch is off	B+

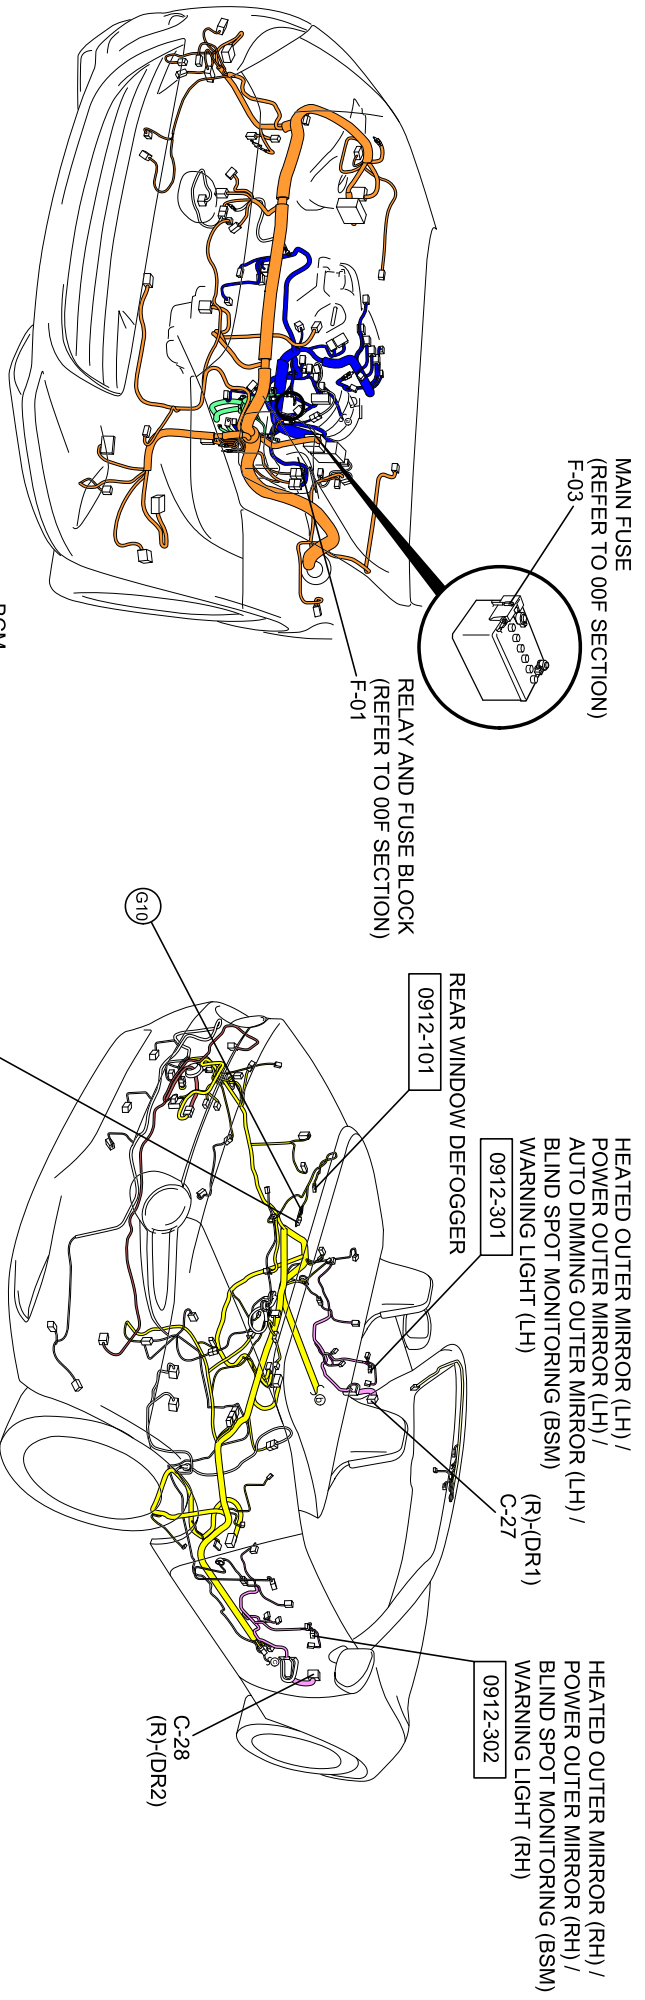

- FRONT HARNESS
- ENGINE HARNESS
- ENGINE No.2 HARNESS
- REAR HARNESS
- REAR No.4 HARNESS
- INSTRUMENT PANEL HARNESS
- EMISSION HARNESS
- DOOR HARNESS
- INTERIOR LIGHT No.2 HARNESS