



0613-101A EPS CONTROL MODULE	0613-101B EPS CONTROL MODULE					
						

EPS control module terminal voltage table (reference)			
Terminal	Test condition		Specification (Reference)
1A	Under any condition		B+
	Ignition off		1.0 V or less
2A	Ignition ON (engine off)		B+
2B	Because this terminal is for communication, determination using terminal voltage inspection is not possible. Perform the inspection using the DTC inspection.		
2C	Because this terminal is for communication, determination using terminal voltage inspection is not possible. Perform the inspection using the DTC inspection.		

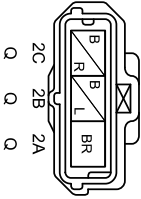