


POWER OUTER MIRROR SWITCH



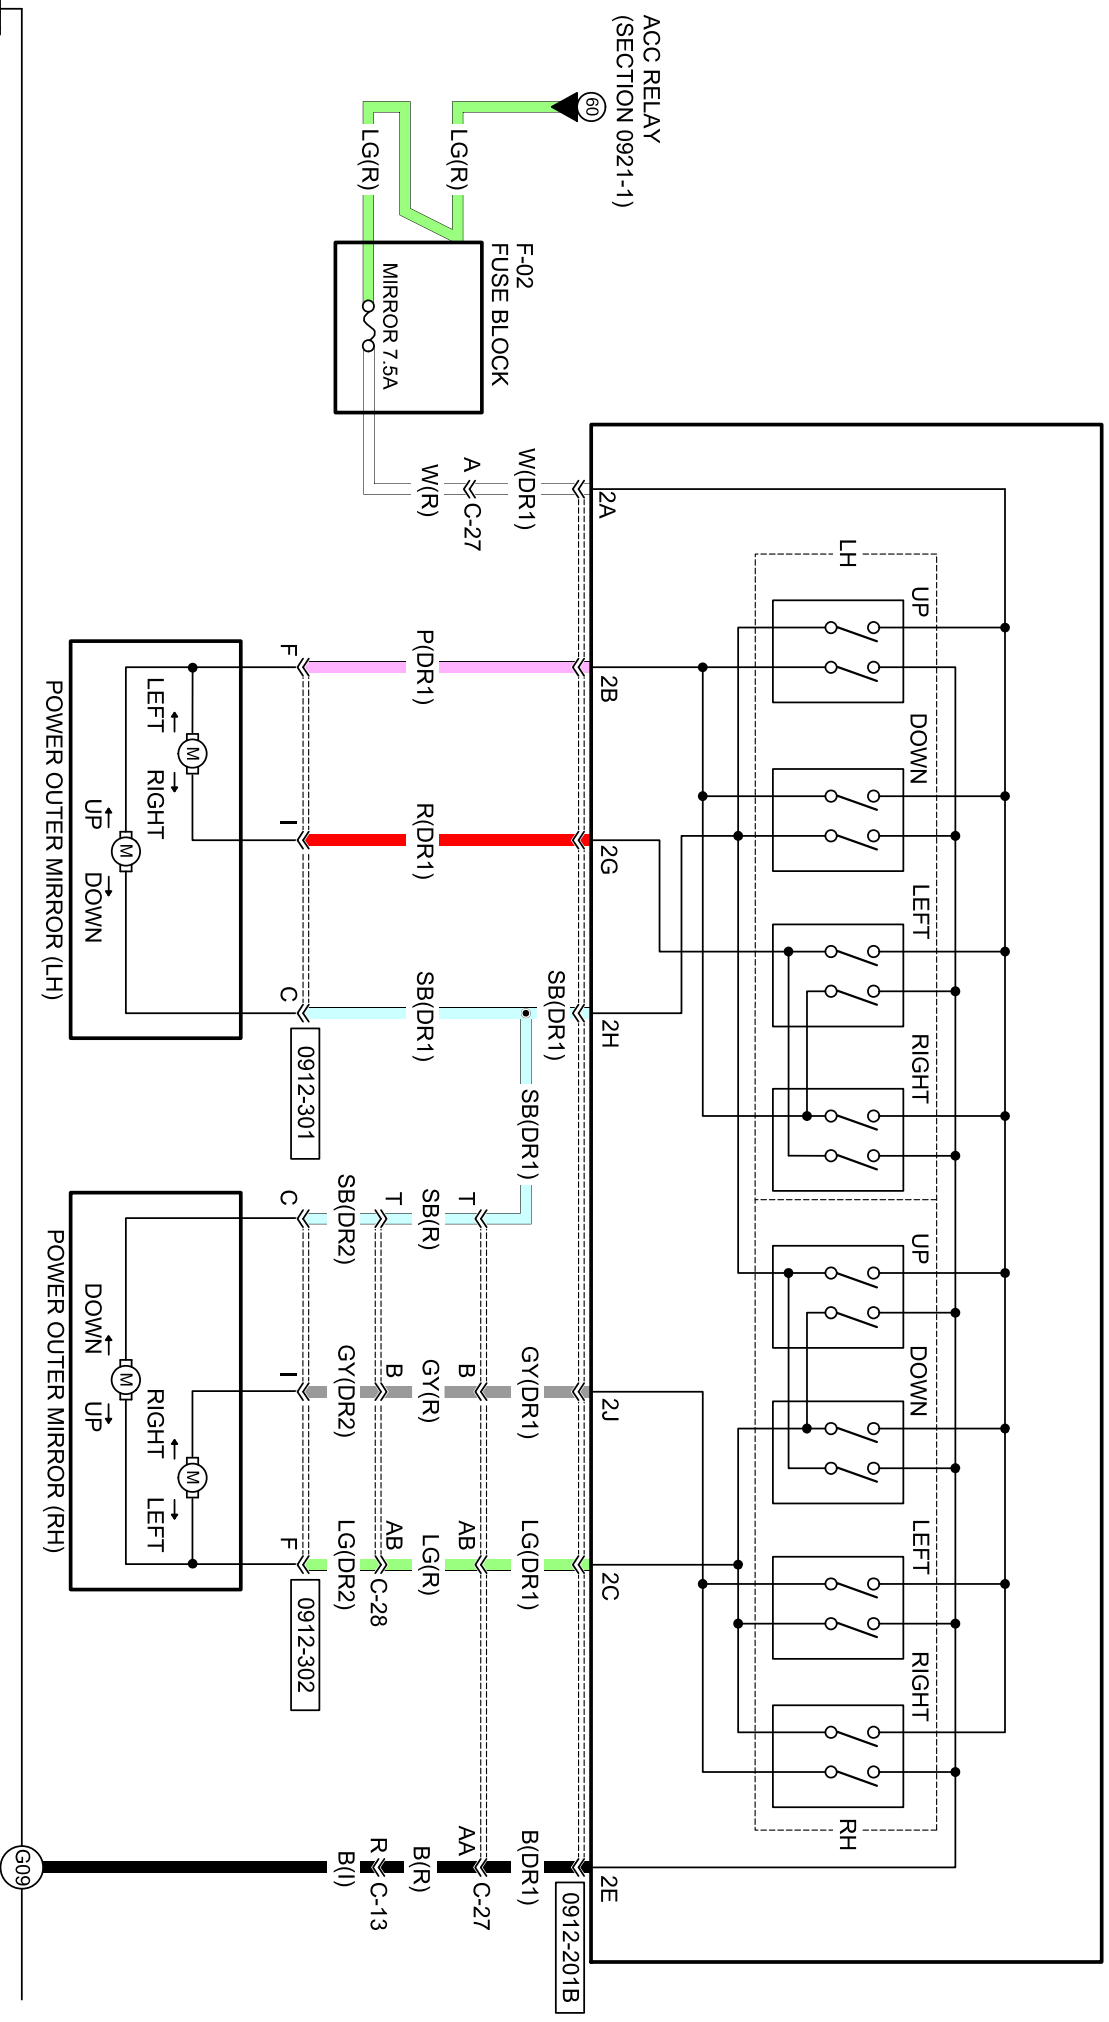


2016 Mazda MX-5 POWER OUTER MIRROR

0912-3

0912-201B POWER WINDOW MAIN SWITCH / POWER OUTER MIRROR SWITCH / DOOR LOCK SWITCH (LH)	0912-301 HEATED OUTER MIRROR (LH) / POWER OUTER MIRROR (LH) / AUTO DIMMING OUTER MIRROR (LH) / BLIND SPOT MONITORING (BSM) WARNING LIGHT (LH)	0912-302 HEATED OUTER MIRROR (RH) / POWER OUTER MIRROR (RH) / BLIND SPOT MONITORING (BSM) WARNING LIGHT (RH)

Power outer mirror switch terminal voltage table (reference)		
Terminal	Measurement condition	Voltage (V)
2A	Ignition is switched ON (engine off or on) or off	B+
	Ignition is switched off (LOCK)	1.0 or less
2B	Outer mirror glass (LH) is operating downward or to right direction	B+
	Other	1.0 or less
2C	Outer mirror glass (RH) is operating downward or to right direction	B+
	Other	1.0 or less
2G	Outer mirror glass (LH) is operating to left direction	B+
	Other	1.0 or less
2H	Outer mirror glass (LH/RH) is operating upward	B+
	Other	1.0 or less
2J	Outer mirror glass (RH) is operating to left direction	B+
	Other	1.0 or less

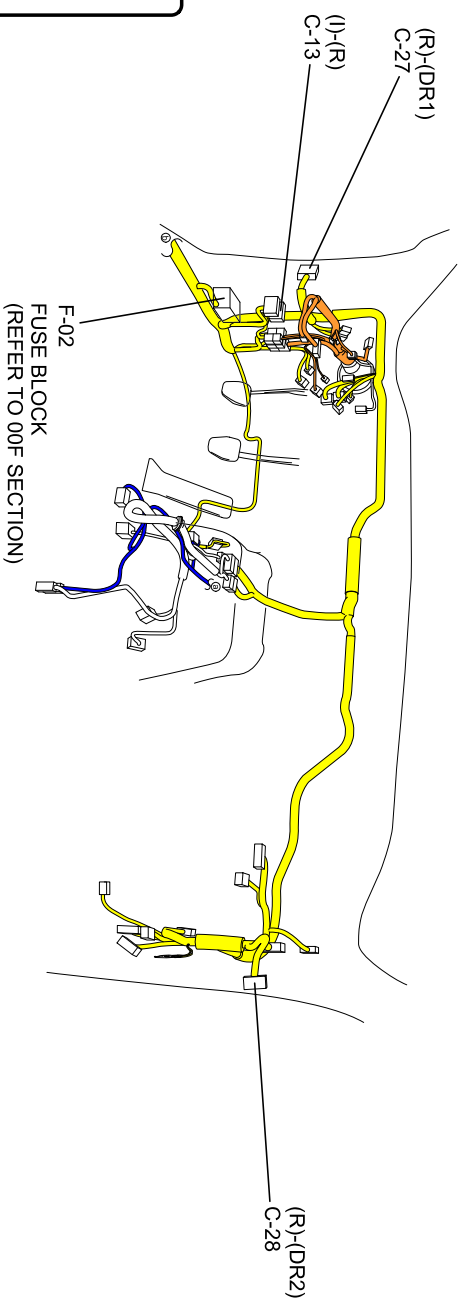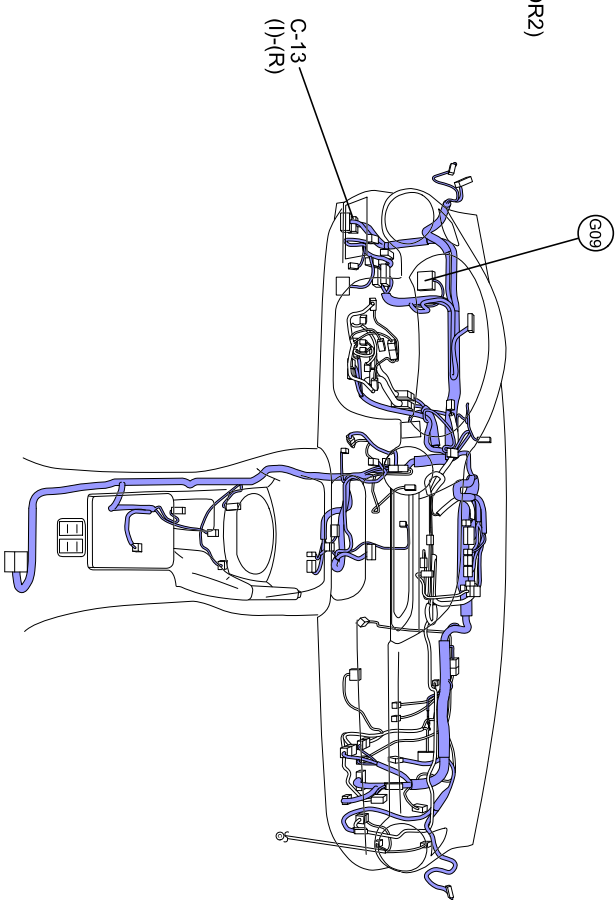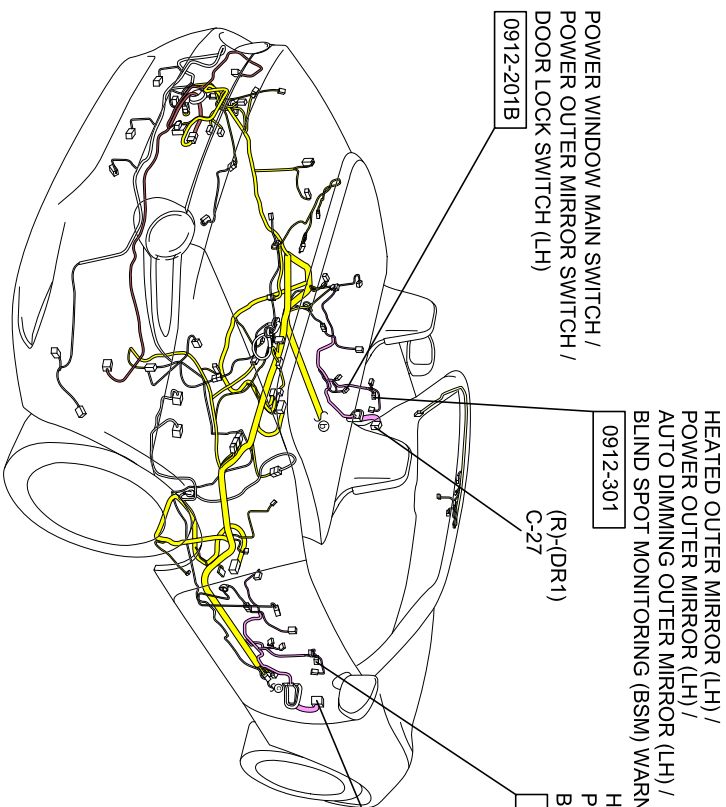

FRONT HARNESS	EMISSION HARNESS	REAR HARNESS	INSTRUMENT PANEL HARNESS	REAR No.4 HARNESS	DOOR HARNESS	INTERIOR LIGHT No.2 HARNESS
---------------	------------------	--------------	--------------------------	-------------------	--------------	-----------------------------